



 
CITROËN Berlingo

Vehicle instruction manual: in the glove compartment

Fuel: Diesel

Tyre pressure: see sticker on the pillar of the driver's door

Reverse gear



Move the gear lever to the right, then back.

Air conditioning/Heating



- A. Set the temperature
- B. Increase/decrease fan speed
- C. Adjust air distribution
- D. Button to close off outside air intake (in tunnels etc.)
- E. Turn the air conditioning on or off


Adjust side mirrors



Use the controls left of the steering wheel, on the lower half of the dashboard.


1. Move the control knob left or right to adjust the left or right side mirror.
2. Move the switch in either of the four directions to adjust the mirror.
3. Return the control knob to its central position.

Cruise control

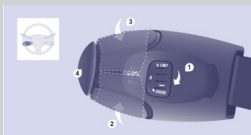

1. Select/deactivate cruise control mode
2. Reduce set speed
3. Increase set speed
4. Pause/resume cruise control

Speed limiter

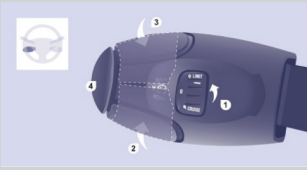

1. Select/deactivate speed limit mode
2. Reduce set speed
3. Increase set speed
4. Activate/pause speed limiter

Steering lock



Turn the ignition key and then the steering wheel to release the lock.

Handbrake



To release the handbrake pull the lever up slightly and push the button at the end. You can then lower the handbrake lever. If the handbrake is engaged **whilst** riding, a red warning sign lights up on the dashboard. Release the handbrake immediately!

Open the boot



Normal operation. To open, press the release button under the cap. The latest models have two buttons: use the right-hand button to open the rear window only, use

the middle button to open the boot. Remember: you cannot open the boot if the rear window is not fully closed. You will not be able to start the car either.


GPS (touch screen)



The latest models have an in-built gps with touch screen. Press the "menu" button above the screen to toggle the main menu, then press "navigate" on the touch screen.

Spare wheel

Stored under the car, in the middle at the back. The jack and wheel wrench are kept in a storage compartment

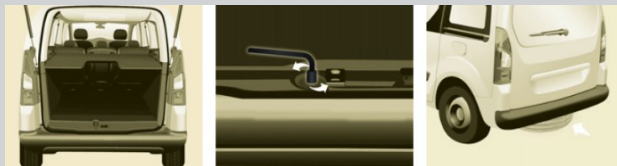

under the front seat, accessible from the rear. The spare wheel sits in a carrier at the back of the car. Use the wheel wrench to release the carrier from inside the car, until the wheel sits low enough to be released from the carrier.


Headlights/Fog lights



Headlights: rotate the dial (A) at the end of the lever left of the steering wheel forward two clicks to switch on the headlights (regular lights for nighttime driving). Pull the lever towards you to operate the high beams. A control light appears on the dashboard, indicating if the headlights (green) or high beams (blue) are active.

Fog lights: front: rotate the ring (B) forward one click to switch on the front fog lights. A control light appears on the dashboard. Rear: turn the ring (C) forward two clicks to operate the rear fog lights. A second control light appears on the dashboard.

Window wipers

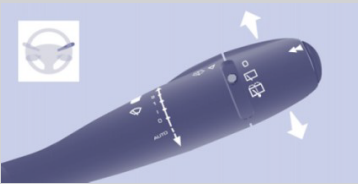

Front wipers:

Push the lever right of the steering wheel upward, to select either of the following modes:
0 = off
1 = intermittent
1 = normal (moderate rain)
2 = high speed (heavy rain)

Push the lever down = single wipe
Pull the lever towards you to spray and wipe.

The wipers engage automatically when using the AUTO mode. The speed of the wipers will be adjusted automatically based on the amount of rain.

Rear wipers:

Rotate the dial at the end of the lever forward one click to operate the rear wipers (intermittent). Rotate the dial further forward to spray and wipe.

12 Volt socket



There is a 12 Volt socket in the front, on the dashboard (remove the lighter), and one in the cargo.

Fuel cap

On the driver's side at the back. Pull the fuel cover open from the left. Unscrew the cap with the ignition key.



Onboard documents



The onboard documents are in the compartment on top of the dashboard between the steering wheel and the windshield.