



CITROËN C3

Vehicle instruction manual: in the glove compartment

Fuel: Diesel

Tyre pressure: see sticker on the pillar of the driver's door

Reverse gear



Move the gear lever right and back.

Air conditioning/Heating



1. Set the temperature
2. Increase or decrease fan speed
3. Air distribution switch
4. Button to close off outside air (in tunnels etc.)
5. Turn the air conditioning on or off

Adjust side mirrors



Use the controls by the handle of the driver's door:

A. Select left or right side mirror. Move the switch back to its neutral position after adjusting.

B. Adjust mirror

Tip: You can fold in the side mirrors with button C: simply glide the button to its central position and pull down.

Cruise control

Use the control panel on the steering wheel's left side:

1. Select cruise control mode (turn dial downwards)
2. Reduce set speed
3. Increase set speed



4. Turn cruise control on or off

The cruise control settings are shown on the dashboard display.

5. Cruise control active/paused
6. Cruise control mode is selected
7. Set speed

Speed limiter

Use the control panel on the steering wheel's left side:

1. Select speed limit mode (turn dial upwards)
2. Reduce set speed
3. Increase set speed



4. Turn speed limiter on or off.

The speed limit settings are shown on the dashboard display.

5. Speed limiter is active/paused
6. Speed limit mode is selected
7. Set speed

GPS (touchscreen)



Press the "menu" button in the middle of the dashboard, just below the screen. Press "navigate" and follow the instructions on the screen.



Navigation



Secondary page



Introducing destination



Select address



Navigate



Confirm

Handbrake




To release the handbrake pull the lever up slightly and push the button at the end. You can then lower the handbrake lever. If the handbrake is engaged whilst riding, a red warning sign lights up on the dashboard. Release the handbrake immediately!

Open the boot



Normal operation. To open, pull the handle at the base of the hatch.

Fuel cap

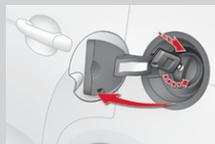

On the driver's side at the back. You cannot detach the key until the cap is properly in place.

Steering lock



Turn the steering wheel and simultaneously turn the ignition key to release the lock.

12 Volt socket




There is a 12 Volt socket in the central console.

Spare wheel



The spare wheel is stored under the boot floor, along with a jack and a wheel wrench. See instruction manual for further instructions.

Window wipers

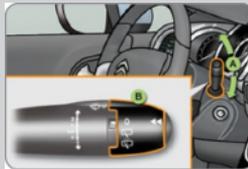

Push the lever right of the steering wheel upward to select either of the following modes:
0 = off
1 = intermittent
1 = normal speed (moderate rain)

Push the lever down = single wipe
Auto (wipers turn on automatically when it rains). To turn off automatic wiping, push the lever upward and select setting 0. Pull the lever towards you to spray and wipe. Rear wipers: Rotate the dial (B) one click forward to operate the rear wipers (intermittent). Rotate the dial further forward to spray and wipe.

Headlights/Fog lights



Headlights: rotate the dial (A) at the end of the lever (B) left of the steering wheel forward two clicks to operate the headlights (regular lights for nighttime driving).

Fog lights: front : turn the collar (C) forward one click to switch on the front fog lights. A control light appears on the dashboard.

Rear fog lights: : Turn the collar (C) forward two clicks to operate the rear fog lights. A second control light appears on the dashboard.

Park assist



This vehicle features a park assist system in the rear.

When in reverse gear, a buzzer will beep faster as you get closer to an obstacle.

Be sure to brake in time!

Notes
