



 
# CITROËN C4 Cactus

Vehicle instruction manual: in the glove compartment

Fuel: Gasoline **E10**/EURO95


Type pressure: see sticker on the pillar of the driver's door

## Reverse gear



Pull up the ring on the gear lever and then go up left.

## Adjust side mirrors

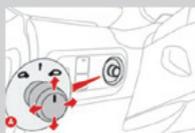

The controls are located on the dashboard, left of the steering wheel:

**A** Select left or right sidemirror  
**B** You can now adjust the mirror in all the directions. Set the arrow back in the middle after adjusting.

## Airco/Heating

Tap the button on the bottom left of the touch screen to adjust air conditioning and heating.

Adjust the settings on the screen:

- adjust air flow
- set temperature
- air distribution (front window, feet,...)
- turn air conditioning on or off
- outside air intake or air recirculation (in tunnels, etc.)

 


**Front window defroster** – button below the touch screen

**Rear window defroster** – button below the touch screen



## Steering lock



To release the lock turn the ignition key and then the steering wheel.

## 12 Volt socket



There is a socket at the bottom half of the dashboard on the left.

### Handbrake



To release the handbrake, pull the lever up slightly and push the button at the end. You can then lower the handbrake lever.

### Cruise control



Use the controls on the steering wheel's left side:

1. Select cruise control mode (turn dial downwards)
2. Reduce set speed
3. Increase set speed
4. Turn cruise control on or off
5. Cruise control active/paused

The cruise control settings are displayed on the dashboard.

See car manual for detailed instructions.

### GPS (touch screen)




To start the GPS function tap the middle button on the left of the screen. Tap MENU to enter a destination.

### Speed limiter

Use the controls on the steering wheel's left side:

1. Select speed limit mode (turn dial upwards)
2. Reduce set speed
3. Increase set speed
4. Turn speed limit mode on or off

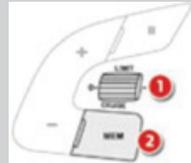

### Window wipers

#### Front wipers:

Push the lever right of the steering wheel upward to select either of the following modes:

**0** = off

**I** = intermittent


**1** = normal speed (moderate rain)

**2** = high speed (heavy rain)

**Auto** = turns on automatically when it rains

Push the lever down = single wipe


Pull the lever toward you to spray and wipe.

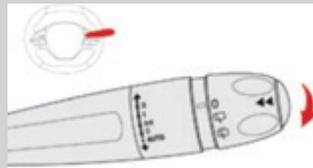

#### Rear wipers:

Rotate the dial forward one click to operate the rear wipers (intermittent). Rotate the dial further forward to spray and wipe.
 
## Headlights/Fog Lights



**Headlights:** rotate the dial at the end of the lever left of the steering wheel to select the correct setting:

- Automatic
- Parking lights only
- Headlights


Pull the lever towards you (in headlights setting) to operate the high beams.

### Fog Lights:

Front: rotate the dial one click forward/upward to turn on the front fog lights. A control light appears on the dashboard.


Rear: rotate the dial forward two clicks to switch on the rear fog lights. A second control light appears on the dashboard.

## Spare wheel

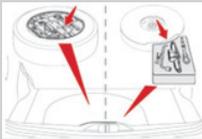


The spare wheel is stored under the boot floor, along with a jack and wheel wrench. See instruction manual for further instructions.

## Open the boot

 


Normal operation. To open, pull the handle at the base of the hatch.

## Park assist

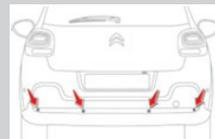

This vehicle features a park assist system in the rear. When in reverse gear, a buzzer will beep faster as you get closer to an obstacle. Visual cues will be displayed on the screen near the central console. Be sure to brake in time.

## Fuel cap

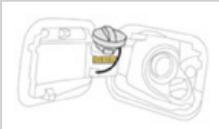

On the driver's side at the back. You can place the cap in the dedicated holder on the fuel lid while fuelling.

## SOS button



Please refrain from using the SOS button or the assistance button on the dashboard. In case of a breakdown or accident please contact cambio with the yellow button on the board computer.