



CITROËN C4

Vehicle instruction manual: in the glove compartment

Fuel: Diesel

Tyre pressure: see sticker on the pillar of the driver's door

Reverse gear



Move the gear lever to the right and back.

Adjust side mirrors



Use the controls by the driver's door handle.

1. Select left or right mirror.
2. Adjust the mirror.
3. Move the switch to its neutral position after adjusting.

Air conditioning/Heating

1. Use the auto mode to let the system reach the desired temperature automatically.
2. Set the temperature on the driver's side (rotary dial)
3. Set the temperature on the passenger's side (rotary dial)
4. Defogging
5. Turn air conditioning on or off
6. Adjust air distribution
7. Adjust air flow
8. Outside air intake/air recirculation
9. "rest" mode; ventilation with the engine



Steering lock



To release the lock turn the ignition key and then the steering wheel.

12 Volt socket



There is a socket near the central compartment, below the air conditioning controls. There is a second socket at the armrest of the rear seat, and one in the boot, on the left.

Handbrake



To release the handbrake pull the lever up slightly and push the button at the end. You can then lower the handbrake lever. If the handbrake is engaged whilst riding, a red warning sign lights up on the dashboard. Release the handbrake immediately!

Cruise control



The controls are located on the steering wheel's left side:

1. Turn the dial downwards to select cruise control mode.
2. Reduce set speed.
3. Increase set speed.
4. Pause/resume cruise control.
5. Toggle list of set speeds.
6. Cruise control active/paused.
7. Cruise control mode selected.
8. Set speed.
9. Select programmed speed.

SOS button



Please refrain from using the SOS button or the assistance button on the dashboard. In case of a breakdown or accident please contact cambio with the yellow button on the on board computer.

Speed limiter



The controls are located on the steering wheel's left side:

1. Select speed limit mode (turn the dial upwards)
2. Reduce set speed
3. Increase set speed
4. Turn on/pause cruise control
5. Toggle list of set speeds
6. Speed limiter active/paused
7. Speed limit mode selected
8. Set speed
9. Select programmed speed

Open the boot



Normal operation. To open, pull the handle (1) at the base of the hatch.

Park assist




This vehicle features a park assist system in the rear. A buzzer will beep faster as you get closer to an obstacle.

Fuel cap

On the passenger side at the back. To open, press the button inside the car, left of the dashboard.



Headlights/Fog Lights

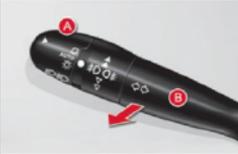

Headlights: In automatic mode your headlights will turn on automatically when it gets dark and switch back off if there is enough ambient light. Rotate the dial (A) at the end of the lever (B) left of the steering wheel forward two clicks to manually operate the headlights (regular lights for nighttime riding). Pull the lever (B) towards you to operate the high beams.

Fog Lights: Front: rotate the collar (C) forward one click to turn on the front fog lights. A control light appears on the dashboard. Rear: rotate the collar (C) forward two clicks to switch on the rear fog lights. A second control light appears on the dashboard.

Spare wheel



The spare wheel is stored at the underside of the car, at the back. A hex and a wheel wrench are kept in a storage compartment behind the driver's seat. See instruction manual for further instructions.

GPS (touch screen)



Press the **NAV** button to start navigation. You can then change the settings using the touch screen.

Window wipers

Front wipers:

Push the lever right of the steering wheel upward to select either of the following modes:

0 = off

1 = intermittent

2 = normal speed (moderate rain)

2 = high speed (heavy rain)

Push the lever down = single wipe or Auto (wipers turn on automatically when it rains).

To turn off automatic wiping mode, push the lever upward and return to setting 0.

Pull the lever towards you to spray and wipe.

Rear wipers: Rotate the dial (B) forward one click to operate the rear wipers (intermittent). Rotate the dial further forward to spray and wipe.

