



CITROËN DS4

Vehicle instruction manual: in the glove compartment

Fuel: Diesel

Tyre pressure: see sticker on the pillar of the driver's door

Reverse gear



Move the gear lever down and right (below the fifth gear).

Air conditioning/Heating



1. Adjust temperature
2. Increase/reduce air flow
3. Air distribution (front window, legs,...)
4. Inside/outside air intake (in tunnels, etc.)
5. Turn air conditioning on or off

Adjust side mirrors




Use the controls by the driver's door handle:

- A. select left or right side mirror. Move the switch to its neutral position after adjusting.
- B. adjust mirror

Tip: You can fold in the side mirrors with button A: simply move the switch to its central position and pull down.

Cruise control

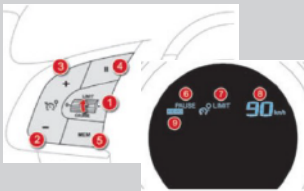

- Use the controls on the steering wheel's left side:
1. Select cruise control mode (turn the dial upwards)
 2. Reduce set speed
 3. Increase set speed
 4. Switch on/pause cruise control
- The selected settings are shown on the dashboard display.
5. Toggle list of set speeds

6. Cruise control mode active/paused
7. Cruise control mode is selected
8. Set speed

Speed limiter


Controls on the steering wheel's left side:

1. Select cruise control mode (turn the dial upwards)
2. Reduce set speed
3. Increase set speed
4. Turn cruise control on or off

The selected settings are shown on the dashboard display.

5. Speed limiter active/paused
6. Speed limit mode is selected
7. Set speed

12 Volt socket

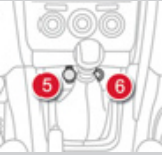


There is a 12 Volt socket in the central console.

Handbrake




To release the handbrake pull the lever up slightly and push the button at the end. You can then lower the handbrake lever. If the handbrake is engaged whilst riding, a red warning sign lights up on the dashboard. Release the handbrake immediately!

Open the boot

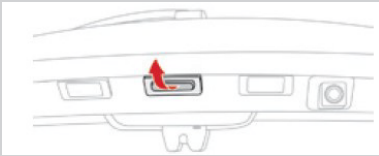

Normal operation. To open, pull the handle at the base of the hatch.

Spare wheel

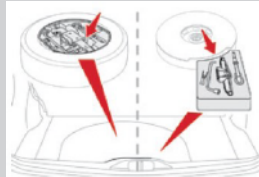


The spare wheel sits under the boot floor, along with a jack and a wheel wrench. See instruction manual for further instructions.

Steering lock

Turn the steering wheel and simultaneously turn the ignition key to release the lock.



Fuel cap

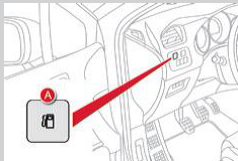

On the passenger side at the back. To open, press the button inside the car, left of the dashboard. Keep in mind the button remains active only for a few minutes after you turn off the ignition.

SOS button



Please refrain from using the SOS button or the assistance button on the dashboard. In case of a breakdown or accident please contact cambio with the yellow button on the on board computer.


Headlights/Fog lights



Headlights: Rotate the dial (A) at the end of the lever left of the steering wheel forward two clicks to operate the headlights (regular lights for nighttime driving). Pull the lever (B) left of the steering wheel towards you to operate the high beams.

Fog lights: Front: rotate the collar forward one click to turn on the front fog lights. A green control light appears on the dashboard. Rear fog lights: rotate the collar (C) forward two clicks to operate the rear fog lights. An orange control light appears on the dashboard.

Window wipers

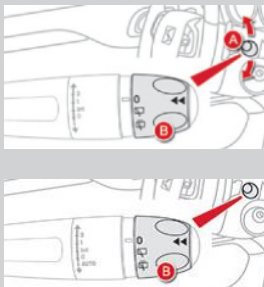

Front wipers:

Push the lever right of the steering wheel upward, to select either of the following modes:

0 = off

1 = intermittent

1 = normal speed (moderate rain)

2 = high speed (heavy rain)

Push the lever down = single wipe

Pull the lever toward you to spray and wipe.

Rear wipers:

Rotate the dial (B) one click forward to operate the rear wipers (intermittent). Rotate the dial further forward to spray and wipe.

Notes
