



Fiat 500

Vehicle instruction manual: in the glove compartment

Fuel: Petrol EURO95/E10

Tyre pressure: see sticker on the pillar of the driver's door

Start/Stop



The start/stop function engages when you start the engine and you drive at least 10 km/h.

To turn off the start/stop function press the button circled in orange.

How it works:

1. The engine shuts down when the vehicle is stationary and the brakes are applied
2. The engine restarts when the brakes are released

Caution: If the engine shuts down when the vehicle is stationary, do not shift to Neutral "N"!



If you did move the lever to position **N**, apply the brakes and shift into a gear in order to (re)start.

If you forget to apply the brakes, the engine will restart but you will be stuck in neutral.

In that case you have to apply the brakes, shift back to "**N**", then shift back into gear and tap the gear lever toward "+".

Transmission: (semi) automatic



Fully automatic: move the gear lever all the way to the left.


Semi automatic: move the lever to its central position. Tap the gear lever towards "+" to engage a higher gear, tap the lever towards "-" to shift to a lower gear.

Reverse gear




Apply the brakes and move the gear lever to **R**.

Air conditioning/Heating

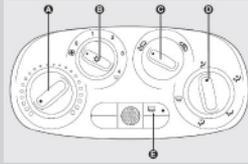


- A.** Set air temperature (red = warm / blue = cold)
- B.** Regulate air flow. Press this button to activate the air conditioning (angled lights up)
- C.** Internal air recirculation/outside air intake
- D.** Adjust air distribution
- E.** Turn the rear window defroster on or off

Handbrake

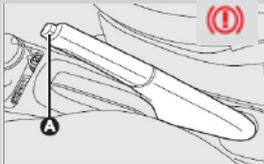

To release the handbrake pull the lever up slightly and push the button at the end. You can then lower the handbrake lever. If the handbrake is engaged whilst riding, a red warning sign lights up on the dashboard. Release the handbrake immediately!


Open the boot

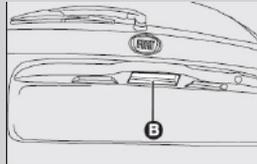

Use the remote key to open the boot. You can also use the handle if the doors are unlocked.

Fuel cap

The fuel cap is located on the passenger side at the back. Use the ignition key to open.

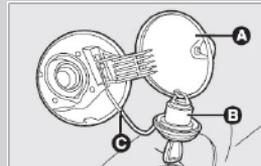

Headlights/fog lights

Headlights: rotate the dial at the end of the lever left of the steering wheel forward one click to operate the headlights (regular lights for nighttime driving). Pull the lever towards you to activate the high beams.



Fog lights

Front: press the button in the center of the dashboard once, right of the hazard lights switch.

Rear: Press the same button twice.

Press three times to turn the lights back off.

Windshield wipers

Front

Use the lever to set the speed:


A = off

B = intermittent

C = normal (light rain)

D = high speed (heavy rain)

E = Brief wipe, non continuous mode

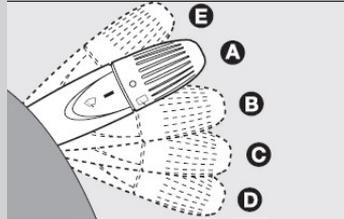


Pull the lever towards you to operate the windshield washer.

Rear

Rotate the dial forward one click to operate the rear wiper. To activate the rear washer push the lever towards the dashboard (non continuous mode).

Adjust side mirrors

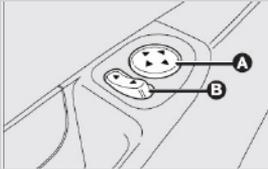


Use the controls by the handle of the driver's door:

A= Use this control to adjust the mirror in all four directions


B= Select the left or right side mirror. Move the switch to its neutral position after adjusting.

12 Volt socket

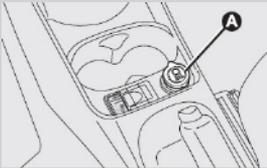

There is a 12 Volt socket in the central console, below the gear lever on the left.

 Steering lock



Simultaneously turn the steering wheel and the ignition key.

Spare wheel



The spare wheel is stored under the boot floor, along with a jack and wheel wrench.

Notes
