



FIAT TIPO

Vehicle instruction manual: in the glove compartment

Fuel: Diesel

Tyre pressure: see sticker on the pillar of the driver's door.

Reverse gear



Press the button under the lever and move to the left and to the front.

Gearbox


To use the 6th gear, move the lever as far to the right as possible (to avoid to put it in 4th gear) and then to the back. Also remember this when switching from 6th to 5th gear.

Adjust side mirrors



1. Select left or right mirror.
2. Adjust the mirror.

Automatic airco

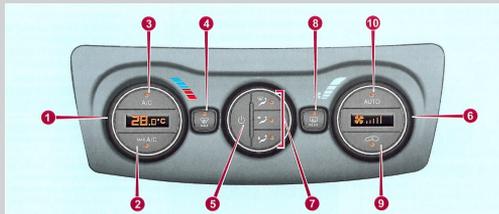


1. Control to adjust the temperature. You can find the selected temperature on the display
2. Button to activate the function MAX A/C
3. Button to activate the airco
4. Button to activate the windshield defrost function
5. Button to activate the air distribution
6. Control to set the fan speed
7. Buttons to direct the airflow
8. Button to activate the rear window defrost function
9. Button to close off outside air intake (in tunnels, etc.)
10. Press the Auto button if you want the air distribution and fan speed to be adjusted automatically

Connect your telephone with the car to make handsfree phone calls or to listen to your own music


Activate Bluetooth on your mobile phone. Press the telephone icon on the touchscreen of the car. Go to settings and select "add device". Once the device is recognized, confirm with the pincode.

Cruise control

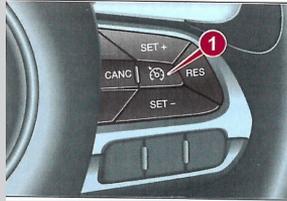

To activate cruise control, press button 1 on the right side of the steering wheel. Once you have reached the desired speed, press the button SET+ or SET-. The car will now keep driving at the same speed. To deactivate cruise control, it is enough to slightly touch the brake pedal or to press the CANCEL button on the steering wheel.

Reversing camera

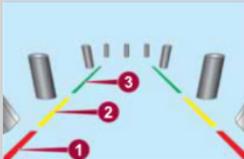

Automatically turns on when you turn back.

Start/stop system



This car has a start/stop function to reduce fuel consumption. When you stop for a red light or in traffic, and you put the gear lever in neutral and release the clutch pedal. The engine will turn off automatically. The engine turns back on as soon as you engage the clutch pedal. Use the button in the middle of the dashboard to deactivate this function.

 
Handbrake



To release the handbrake pull the lever up slightly and push the button at the end. You can then lower the handbrake lever. If the handbrake is engaged whilst riding, a red warning sign lights up

on the dashboard. Release the handbrake immediately!

Park assist



This car has a park assist function. It is automatically activated when you start driving backward. Sensors measure the distance between the vehicle and any obstacles behind you. The closer you come to an obstacle the faster a beep will sound.

Fuel cap

On the driver's side at the back. The outside fuel cap is directly closing the reservoir. There is no extra cap underneath.



Headlights/Fog lights



Headlights: rotate the dial at the end of the lever left of the steering wheel:

1. O: daylights are switched on
2. Rotate the dial upward to switch on the headlights (regular lights for nighttime riding)
3. Rotate the dial downward to switch to automatic mode. In this mode the headlights will turn on automatically when it gets dark

Fog lights: Press the button on the left side of the steering wheel.

Spare wheel



The spare wheel is stored under the boot floor, along with a jack and wheel wrench.

Navigation



You can use the navigation by pressing the arrows on the left side of the steering wheel until you find 'Navigation' on your dashboard. Or you can press the button "NAV" at the bottom of the touchscreen.

Window wipers

Push the lever right of the steering wheel upward to select either of the following modes:


- 1 = off
- 2 = slow intermittent
- 3 = fast intermittent
- 4 = normal speed (moderate rain)
- 5 = high speed (heavy rain)

Spray and wipe: Push the lever towards the dashboard to spray and wipe the rear window. Pull the lever to spray and wipe the front window.

Rear wipers:

Rotate the dial forward to operate the rear wipers:

- 1 = stop
- 2 = intermittent
- 3 = normal speed

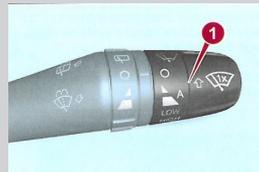

12-volt socket

There is a socket in the trunk and at the bottom half of the dashboard. You will also find a USB and an Audio entrance.