



OPEL Vivaro

Vehicle instruction manual: in the glove compartment

Fuel: Diesel

Tyre pressure: see sticker on the pillar of the driver's door

Loadspace volume: Max depth: 2400 / Max width: 1690 / Max height: 1387

Reverse gear



Pull up the collar on the gear lever, and move the lever left and forward.

Adjust side mirrors



Use the electric controls by the handle of the driver's door. Rotate the dial left or right to select the respective mirror, then find the desired position by moving the switch. Move the dial to its original position after adjusting. The lower mirrors are fixed.

Air conditioning/Heating



Press the A/C button to turn on the air conditioning (the button is located next to the display in the latest models).

You can choose to close off outside air intake (for instance in tunnels). **An led** lights up on the dashboard when active (fan).

Set the desired temperature with the dial on the right.

Adjust the air flow with the dial in the middle.

Use the dial on the left to adjust air distribution (front window, feet,...)

Steering lock




Simultaneously turn the steering wheel and the ignition key to release the lock.

12 Volt socket




There is a 12 Volt socket on the dashboard and in the back of the car.

Cruise control

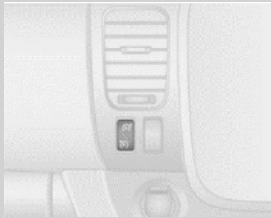

Activate cruise control with the button left of the steering wheel, beneath the air vent. Adjust the speed with the + and – buttons on the steering wheel.

Spare wheel

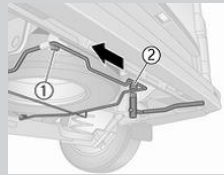


The spare wheel is mounted under the car. Unscrew bolt 1 to unlock the wheel carrier but make **sure not** to release the carrier entirely. Now remove bolt 2, and pull the carrier to the left until bolt 1 releases. You can now lower the wheel carrier. The hex and wheel wrench are kept in a storage box under the driver's seat.

Speed limiter (latest models only)



Turn on the speed limiter with the button left of the steering wheel, beneath the air vent. (the same button as cruise control). Adjust the speed with the + and – buttons on the steering wheel.

Open the boot

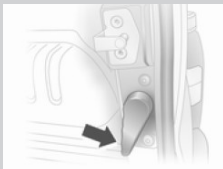


Pull the outside handle to open the left-hand door. Open the right-hand door with the interior handle.

Fuel cap




The fuel cap is located on the driver's side. The cap can be opened only if the car is unlocked and the left-hand door is opened. Pull the lid to open. To unscrew, turn the cap counterclockwise. You can place the cap in the dedicated holder on the fuel lid when fueling.

Handbrake

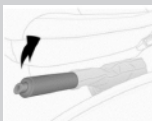



To release the handbrake pull the lever up slightly and push the button at the end. You can then lower the handbrake lever. If the handbrake is engaged whilst riding, a red warning sign lights up on the dashboard. Release the handbrake immediately!

Headlights/Fog lights

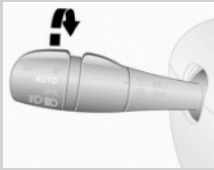

Headlights: Rotate the dial at the end of the direction indicator forward two clicks to operate the headlights (regular lights for nighttime driving). Pull the lever towards you to activate the high beams.

Windscreen wipers

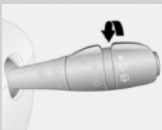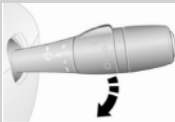

Front wipers:

Push the lever right of the steering wheel upward to select either of the following modes:

0 = off

1 = intermittent

2 = normal speed (moderate rain)

Auto = wipers are operated and the speed is adjusted automatically.

Pull the lever towards you to spray and wipe.

Rear wipers:

Rotate the lever:

0 : off

1st position: wipe

2nd position: spray

Park assist (2016 and later models)



This function switches on automatically when reverse gear is engaged. You will briefly hear an audible signal when the system is ready for use.

An obstacle is indicated by audible feedback and, depending on the model, appears on the display as well. The buzzer will beep faster as you get closer to an obstacle. The buzzer will sound continuously if the obstacle is closer than 30 cm.

You can deactivate the system by pressing the button left of the steering wheel.