



PEUGEOT 308 SW

Vehicle instruction manual: in the glove compartment


Fuel: Gasoline **E10**/EURO95

Type pressure: see sticker on the pillar of the driver's door

Airco/Heating

To adjust, use the Airco Menu on the touch screen.

- 1** desired temperature
- 2** strength ventilation
- 3** air distribution control (windscreen, feet, ...)
- 4** switch on / off air conditioning
- 5** automatic program

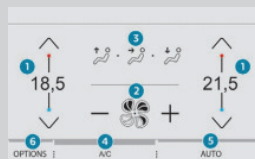

Front window defroster – button below the touch screen
Rear window defroster – button below the touch screen



Reverse gear



Pull up the ring on the gear lever and move up left.

Handbrake



To release the hand brake pull up slightly and press the button at the end.
Then you can lower the handbrake lever.

If the hand brake is engaged whilst riding, a red warning sign lights up on the dashboard. Release the handbrake immediately!

Adjust side mirrors

The controls are on the driver's door:

- A** Select left or right mirror
- B** You can then adjust the mirror in all directions.

Please move the switch back to his neutral position after adjusting.



Steering lock


To release the lock turn the ignition key and then the steering wheel.

GPS (touchscreen)



To release the lock turn the ignition key and then the steering wheel.

Cruise control

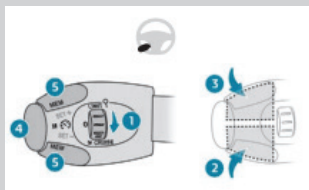

Use the controls on the steering wheel's left side:

1. Select cruise control mode
2. Reduce set speed
3. Increase set speed
4. Activate/deactivate cruise control
5. Pause cruise control


The cruise control settings are displayed on the dashboard. See car manual for detailed instructions.

12 Volt socket



This is located at the bottom of the dashboard on the left.

Speed limiter

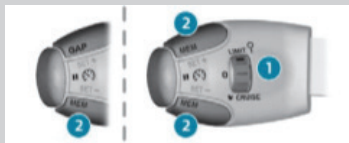

Use the controls on the steering wheel's left side:

1. Select speed limit mode (turn dial upwards)
2. Save set speed

Window wipers



Front wipers:

Push the lever right of the steering wheel upward to select either of the following modes:

0 = off

1 = intermittent

1 = normal speed (moderate rain)

2 = high speed (heavy rain)

Push the lever down = single wipe

Auto = the wipers turn on automatically when it rains. To switch off automatic wiping mode, push the lever upward and return to setting 0.



Rear wipers:

Rotate the dial (B) forward one click to operate the rear wipers (intermittent). Rotate the dial further forward to spray and wipe.

Headlights/Fog Lights

Headlights : rotate the dial at the end of the lever left of the steering wheel to select the correct setting:

- automatic
- parking lights only
- headlights

Pull the lever towards you (in headlights setting) to operate the high beams.



Fog lights:

Front: rotate the dial one click forward/upward to turn on the front fog lights. A control light appears on the dashboard.



Rear: rotate the dial forward two clicks to switch on the rear fog lights. A second control light appears on the dashboard.

Spare wheel



 
The spare wheel is stored under the boot floor, along with a jack and wheel wrench. See instruction manual for further instructions.

Open the boot




Normal operation. To open, pull the handle at the base of the hatch below the Peugeot logo.

Park assist




This vehicle has a park assist system in the rear. When in reverse gear, a buzzer will beep faster as you get closer to an obstacle.

Fuel cap

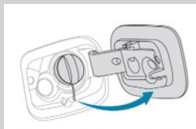

The fuel cap is on the driver's side. You can open the cover by simply pushing on it.

SOS button

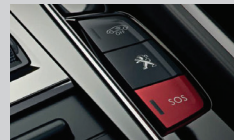

Please refrain from using the SOS button or the assistance button on the dashboard. In case of a breakdown or accident please contact cambio with the yellow button on the on board computer.