



Fiat Tipo Berline

Vehicle instruction manual: in the glove compartment

Fuel: Petrol E10/EURO95

Tyre pressure: see sticker on the pillar of the driver's door

Start the car

You start the car **by pushing in the clutch and pressing the start/stop button**. When you return to the car with the key, the car will open automatically when you touch the door handle.



Start/Stop system

When you stop for a red light or in traffic, and you put the **gear lever in neutral** and **release the clutch pedal**. The engine will turn off **automatically**. The engine turns back on as soon as you engage the clutch pedal. Use the button @ in the middle of the dashboard to deactivate this function.

Reverse gear

To put the car in reverse gear, move the gear lever **to the right and down** (*where you would expect a 6th gear*).



Adjust side mirrors

1. **Select** left or right mirror.
2. **Adjust** the mirror.




Park assist



This car has a **park assist function**. It is automatically activated when you start driving backwards. **Sensors measure the distance between the vehicle and any obstacles behind you**. The closer you come to an obstacle the faster a beep will sound.

Reversing camera

Automatically turns on when you reverse.

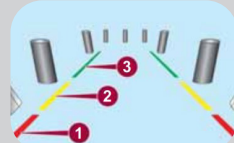


Handbrake


To release the handbrake **pull the lever up slightly and push the button** at the end. You can then lower the handbrake lever.

Fuel cap

On the **driver's side at the back**. The outside fuel cap is directly closing the fuel tank. **You open the cap by pushing it**, push it again after refueling. Make sure it's closed well.

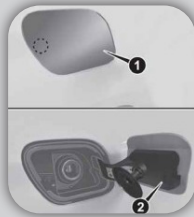

Airconditioning/heating

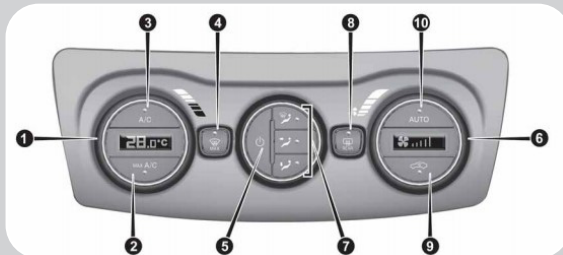

1. Control to **adjust the temperature**. You can find the selected temperature on the display.
2. Button to activate the **function MAX A/C**.
3. Button to activate the **airconditioning**.
4. Button to activate the **windshield defrost** function.
5. Button to activate the **air distribution**.
6. Control to set the **fan speed**.
7. Buttons to direct the **airflow**.
8. Button to activate the **rear window defrost** function.
9. Button to close **off outside air intake** (in tunnels, etc.).
10. Press the **AUTO** button if you want the air distribution and fan speed to be **adjusted automatically**.

Cruise control

To activate cruise control, **press button 1 on the right side of the steering wheel**. Once you have reached the desired speed, press the button **SET+ or SET-**. The car will now keep driving at **the same speed**.

To deactivate cruise control, it is enough to slightly **touch the brake pedal** or to press the **CANC** button on the steering wheel.



GPS/NAV

You can use the navigation by **pressing the arrows on the left side** of the steering wheel until you find **'Navigation'** on your dashboard.

Or you can **press the button "NAV"** at the bottom of the touchscreen.



Headlights/Fog lights


Headlights: rotate the dial at the end of the lever left of the steering wheel:

0 = daylights are switched on

1 = Rotate the dial **upward** to switch on the **headlights** (regular lights for nighttime driving).

2 = Rotate the dial **downward** to switch to **automatic mode**. In this mode the headlights will turn on automatically when it gets dark.

Fog lights: Press the button **on the left side** of the steering wheel.

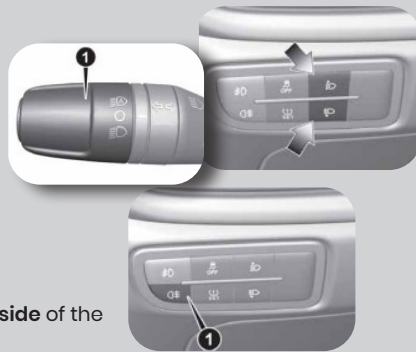

Window wipers

Front: Push the **lever right of the steering wheel** upward to select either of the following modes:

1 = off

2 = slow intermittent

3 = fast intermittent

4 = normal speed (moderate rain)

5 = high speed (heavy rain)



Spray and wipe: Push the lever **towards** the dashboard to spray and wipe the **rear window**. Pull the lever to spray and wipe the **front window**.

Rear: Rotate the dial **forward** to operate the rear wipers.