



## Nissan Leaf

Vehicle instruction manual: in the glove compartment


Motorisation: 100% electric

Tyre pressure: see sticker on the pillar of the driver's door

### Start the car

**Push the start button** on the center console whilst pushing on the brake pedal. The dashboard will light up.


Do not forget to deactivate the handbrake before departing.

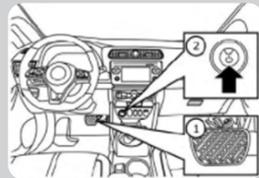

### Gear shifter

**Always press the break** while shifting gears.


- Push the lever to the left and to the front to **reverse (R)**.
- Push it to the left and to the back to **drive forward (D)**.
- Push it to the back again to go **drive in regenerative mode (B)**.
- Push the button on the lever to go in **park mode (P)**.

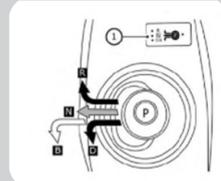

### Handbrake

The handbrake is operated **via the pedal left of the break pedal**.

Push it to activate or deactivate it.

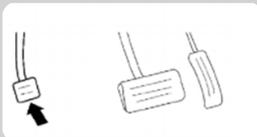

### Airco/heating

Set air conditioning and heating **via the control panel below the display** of the center console.





The **AUTO mode** can be used in any year tide because the system **automatically** switches to a constant temperature, airflow distribution and blower aims.

## Connection to charge


Push the button on the dashboard to the **left** of the steering wheel to open the charging port. The charging port is a large panel on the front bumper, which you can then fold up. Then open the **right** charging connection. The left connection is only for special DC fast charging stations.

You **close** the tailgate **by pushing** it closed.

### *Connection to charge*

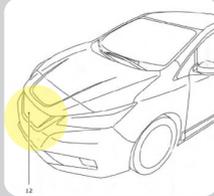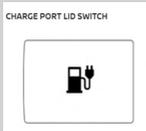


### *Open the charge cover*

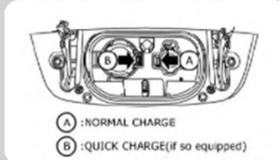

## E-pedal

**Activate by pressing the button.** Now you can drive with 1 pedal.


When the accelerator pedal is released, the car will brake automatically. When activated the car will at a standstill only move when pushing the accelerator.

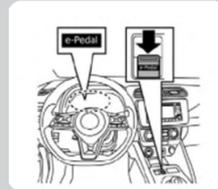

## Cruise control / Speed limiter


The switches are on the steering wheel.

1. RES/+ switch (increase the set speed)
2. CANCEL
3. SET/- switch (lower the set speed)
4. Cruise control ON
5. Speed limit ON

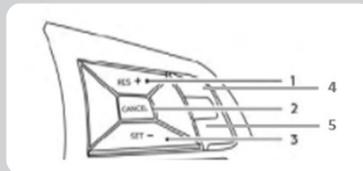


Push slightly **on the break** or push the **CANCEL** button to **deactivate** the cruise control or speed limiter.

## Headlights/Fog lights

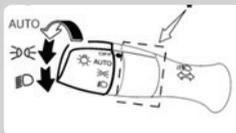

When **the start button is ON** and the headlight switch is in the AUTO position, the headlights, the parking lights, the dashboard lights, the rear light and the other lighting **automatically light up** depending on the brightness of the environment.

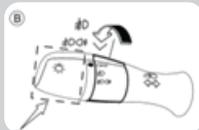

By turning the middle ring once, the **front fog** lamps come on.

By turning again, the **rear fog** light also comes on.

## Window wipers

**Press the lever down** to operate the windshield wipers at different speeds.

Preferably use the AUTO position.



## Park assist

There is a parking camera in this car: when the shift lever is set to **R (Reverse)**, the monitor shows the view behind the vehicle.

## Spare wheel

**There is no spare wheel**, but there is a **repair kit** for a flat tire. This is located **on the left side of the trunk** behind a plastic panel.

## ECO-switch

In ECO driving mode, the engine **consumes less power**.

As a result, **the driving range of the car can be enlarged**, but at cost of the performance (acceleration, speed).

