



CITROËN E-BERLINGO

Vehicle instruction manual: in the glove compartment

Motorisation: 100% **electric**


Tyre pressure: see sticker on the pillar of the driver's door

Before starting your journey

Step 1 Check the vehicle for new damages, open the car using the **cambioApp** or your **cambio-card** and follow the instructions on the onboard terminal.

Step 2 **Disconnect the charging cable correctly**

1. **Scan the charging pas** (located in the driver's side door) at the charging station to end the charging session.
2. **Disconnect the charging cable (1)** from the vehicle (by pulling). The **charge indicator (4)** turns green.
3. **Close both charging port covers** (inner and outer covers) and **place the charging cable in the boot of the vehicle.**

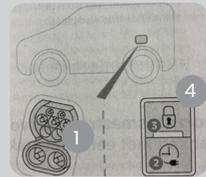

Caution, is the cable stuck because you waited too long? Lock the vehicle using the key and unlock it again - the cable should no longer be locked now.

Step 3 **Start the vehicle**

1. **To start the vehicle**, the drive selector must be in the **"P" position**.
2. Press the **brake pedal** and **turn the key**.



This indicator lamp comes on when the vehicle is ready to drive.

i *If the drive selector is not in position P and/or if the brake pedal is not pressed, the vehicle will not start.*

After your journey

Step 1 Stopping and correctly closing the car

1. Turn off car by turning key.

Check the following before getting out of the car:


- the car must be in the “P” position (press the P-button).
- parking brake is on.

Step 2 Correctly connecting the charging cable

1. Check if the car is in “P” position and if the ignition of the vehicle is turned off before charging. If not, charging won't be possible.

- Take the charging cable from the boot of the vehicle and connect it to the charging station.
- Register at the charging station with the charging pass (in the driver's side door)

LED lights on terminal

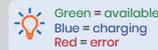

2. Press the charging port cover to open it and put the charging cable in place. The vehicle is charging correctly if the charging light blinks green in the charging port. You will also see the remaining time on the dashboard.



If this isn't the case, the charging hasn't started correctly. Follow the procedure again and check if the charging cable is plugged in correctly. A red light in the charging port indicates that the charging cable is locked in place.

3. Put the charging pass back in the driver's side door and close the vehicle (after putting the key back in the onboard terminal) using your cambio-card or cambioApp.

Always check if the car is charging before leaving! The light in the charging port or on the dashboard (time until charging is complete) will indicate if the vehicle is charging.

Charging port cover


The socket is located **at the back on the driver's side**. Remove the top plastic cover to charge at a public charging station.

For a **fast charging station**, you also have to **remove the bottom cover**.

Adjust side mirrors

Use the controls **left of the steering wheel**, on the lower half of the dashboard:

1. Move the control knob **left or right** to adjust the left or right side mirror.
2. Move the switch in either of the four directions to **adjust the mirror**.
3. Return the control knob to its **central position**.

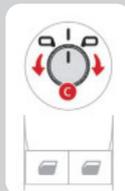

Automatic electric hand break

The system activates the parking brake on switching off the engine and releases it as the vehicle moves off.



Automatic transmission

Push the brake and tap the selection lever to change to R/N/D; Push the button to activate P or B.

- P Park
- R Reverse
- N Neutral
- D Drive (forward)
- B Brake (driving forward with regenerative braking)



Eco mode

The ECO mode is a function that optimizes the range of the vehicle, but does have an impact on its speed, acceleration, heating, etc. (De)activate the Eco mode using the “Drive mode” button on the central console.



D vs B-position

The **regenerative braking function** simulates engine braking and allows the car to slow down without having to press the brake pedal. The car slows down faster if you let go of the accelerator.

When the accelerator is released, **mechanical energy is recovered and the battery is partially recharged.**

Pushing the gear stick backwards in position D/B **activates/deactivates** the function.

The status of the function is not saved when the ignition is turned off.

Cruise control / Speed limit

Use the controls **on the steering wheel's left side:**

1. Select **control/speed limit mode.**
2. **Reduce** set speed.
3. **Increase** set speed.
4. **(De)Activate cruise control.**
5. Pause



The cruise control settings are displayed on the dashboard. See car manual for detailed instructions.

i Braking disables the cruise control

Headlights



 Rotate the dial at the end of the lever left of the steering wheel to select the correct setting.

Fog lights




 Rotate the dial forward two clicks to switch on the rear fog lights. A second control light appears on the dashboard.

Wipers

Front:

Push the lever right of the steering wheel upward to select either of the following modes:

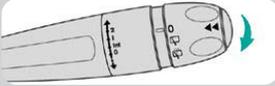


- 2** Fast wiping (heavy rain)
- 1** Normal wiping (moderate rain)
- Int** Intermittent wiping
- 0** Switching off
- ↓** Single wipe
- AUTO** Automatic wiping (the wipers turn on automatically when it rains).

Rear:

Rotate the dial forward one click to operate the rear wipers (intermittent). Rotate the dial further forward to **spray and wipe**.

Air conditioning/Heating

1. Set the **temperature**.
2. **Increase/decrease** fan speed.
3. **Adjust** air distribution.
4. Button to close off **outside air** intake (in tunnels, etc.).
5. Turn the **air conditioning on or off**.

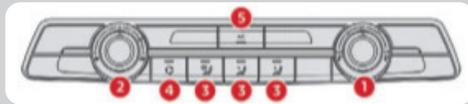


Open the boot

Normal operation: to open, press the release button under the cap.

The latest models have **two buttons**: use the right-hand button to **open the rear window only** ; use the middle button to **open the boot**.

Remember: you can not open the boot if the rear window is not fully closed. You will not be able to start the car either.

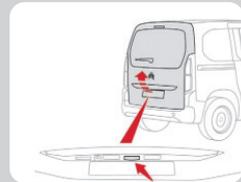

Spare wheel

This car does not carry a spare wheel; a repair kit is stored under the boot floor.