



CITROËN C4

Vehicle instruction manual: in the glove compartment.

Fuel: **Gasoline E10/EURO95**

Tyre pressure: see sticker on the pillar of the driver's door.


Adjust side mirrors

The controls are on the driver's door:

A Select left or right mirror

B You can then adjust the mirror in all directions.

Please move the switch back to its neutral position after adjusting.

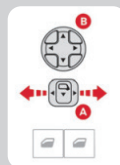

Reverse gear

Pull up the ring on the gear lever and **move up left**.



Automatic electric hand break



The system activates the parking brake on switching off the engine and releases it as the vehicle moves off.

Navigation/Airco/Heating



Use this button to access the menus, then press the buttons that appear on the touch screen.

To adjust, use the Airco Menu on the touch screen.

1 desired temperature.

2 fan speed.

3 air distribution control (windscreen, feet, ...).

4 switch on / off air conditioning.

5 automatic program.



Defroster



Front window defroster – button below the touch screen




Rear window defroster – button below the touch screen

Cruise control and Speed limiter



Can be found on the **left** of the steering wheel.

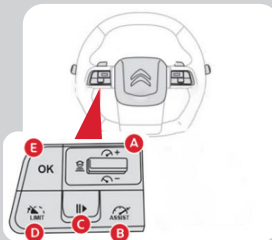
- A** Increase/decrease set speed.
- B** Enable/Disable the **cruise control**.
- C** Start/pause the speed limiter or cruise control with the saved speed.
- D** Enable/Disable the **speed limiter**
- E** Activate the speed limiter or cruise control with the speed savec.



Headlights

Rotate the dial at the end of the lever left of the steering wheel to select the correct setting:

- 0** No lights
- AUTO** **Automatic**
-  Parking lights
-  **Low beams and high beams**
Pull the lever **towards** you (in low beam setting) to operate the high beams.

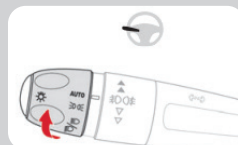

Fog lights

Front: rotate the dial one click forward/upward to turn on the front fog lights. A control light appears on the dashboard.


Rear: rotate the dial forward two clicks to switch on the rear fog lights. A second control light appears on the dashboard.




Switching off can be done by turning the same ring back down.

Front wipers

Push the lever right of the steering wheel upward to select either of the following modes:

- 2** Fast wiping (heavy rain)
- 1** Normal wiping (moderate rain)
- Int** Intermittent wiping
- 0** Switching off
-  Single wipe
- AUTO** Automatic wiping (the wipers turn on automatically when it rains). To switch off automatic wiping mode, push the lever upward and return to setting 0.

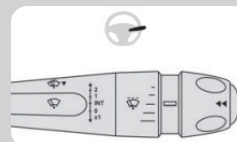

Pull the lever **towards** you to spray and wipe.

Rear wipers


Rotate the dial forward one click to operate the rear wipers (intermittent).

Spare wheel




The spare wheel is stored **under the boot floor**, you can find a compressor kit and a tow hook.

Open the boot

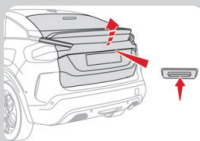

To open, **pull the handle at the base of the hatch**.

Park assist

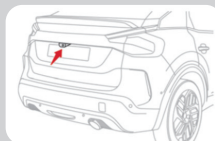

This vehicle has a park assist system in the rear. When **in reverse gear**, the rear view camera will switch on.

Fuel cap

The fuel cap is **on the driver's side**. You can open the cover by simply **pushing** on it.

