



 
# Opel Corsa

Vehicle instruction manual: in the glove compartment

Fuel: Petrol **E10**/EURO95


Tyre pressure: see sticker on the pillar of the driver's door

## Steering lock

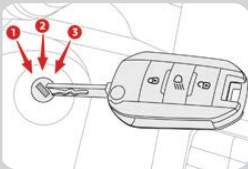

To release the lock turn the ignition key and then the steering wheel.

## Adjust side mirrors

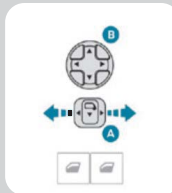 

The controls are on the driver's door:

- A** Select left or right mirror
- B** You can then adjust the mirror in all directions. Please move the switch back to its neutral position after adjusting.


## Reverse gear



 Move the gear lever down and right.


## Window wipers

**HI:** high  
**LO:** low  
**AUTO:** turns on automatically when it rains  
**OFF:** off  
**Ix:** single wipe

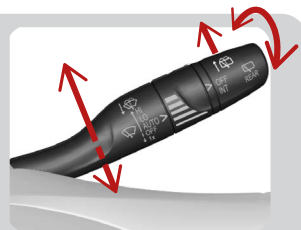

Push the lever away from you to spray and sweep. Turn the ring on the end of the lever to activate the rear wiper.

### Handbrake

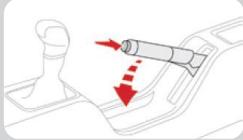 

To release the handbrake pull the lever up slightly and push the button at the end. You can then lower the handbrake lever.

If the handbrake is engaged whilst driving, a red warning sign lights up on the dashboard. Release the handbrake immediately!



### GPS (touchscreen)



To start the GPS function tap the middle button on the left of the screen. Tap MENU to enter a destination.

### Lights/fog lights



Controls on the dashboard left of the steering wheel. By turning the knob you can select between automatic, marker lights and dimmed lights.

- A. Through this button you activate the rear fog lights.

### Air conditioning/Heating

 


Activate the air conditioning by pressing the "A/C" button. With the left dial you can set the temperature, with the right one the intensity.

Defogging the windshield/back window via the buttons:



### Speed limiter/Cruise control

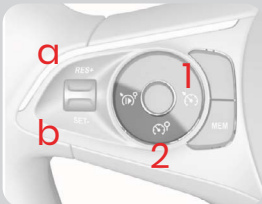

Controls on the left side of the steering wheel:

1. Select cruise control
  - a. Increase speed
  - b. Lower speed/activate cruise control
2. Select speed limiter
  - a. Increase speed
  - b. Lower speed/activate speed limiter


The speed limiter/cruise control are displayed on the dashboard. See car manual for detailed instructions.

### Open the boot



 
Boot switch is located under the brand symbol on the boot lid

### Spare wheel

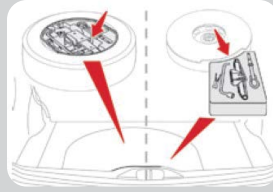

The spare wheel is stored under the boot floor, along with a jack and wheel wrench. See instruction manual for further instructions.

### Fuel cap (*always use Petrol E10/EURO95*)

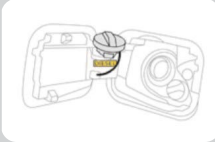 

On the driver's side at the back. You can place the cap in the dedicated holder on the fuel lid while fueling.

### 12 volt socket



There is a socket at the bottom half of the dashboard on the left.

### Park assist



This vehicle features a park assist system in the rear.

When in reverse gear, a buzzer will beep faster as you get closer to an obstacle. Visual cues will be displayed on the screen on the dashboard.

Be sure to brake in time!