



Opel Corsa (Automatic)

Vehicle instruction manual: in the glove compartment

Fuel: Gasoline E10 / EURO95

Tyre pressure: see sticker on the pillar of the driver's door

Before starting your journey

Step 1

- Unlock the car using the cambio app.
- Check the inside and outside of the vehicle for any new damage and answer the damage question in the app.
- 3. Take the key from the key holder located in the glove compartment.

Starting the vehicle

 
Step 2

- 1. Insert the key into the ignition.
 - To unlock the steering wheel, turn the ignition key while turning the steering wheel.
- 2. Fully press the brake pedal.

Keep your right foot on the brake for the following steps:

- Turn the key all the way to start the engine.
- Release the electronic parking brake by pushing down the 'P' switch (red light turns off).
- Keep your right foot on the brake and select a gear (R/N/D).

See overview on the next page.

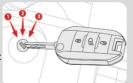

Automatic transmission

Push the brake and tap the selection lever to change to R/N/D

- P Park
- R Reverse
- N Neutral
- **D** Drive (forward)
- M Manual



Eco modus

The ECO mode is a function that optimizes the range of the vehicle, but does have an impact on its speed,

acceleration, heating, etc. (De)activate the Eco mode using the "Drive mode" button on the central console.



- 3. Select D (Drive; forward) or R (Reverse; backward) by pushing the silver gear selector down once or multiple times.
- 4. Gradually release the brake pedal and gently press the accelerator.

 Optional: Select a driving mode: Eco, Normal, or Sport.

 Optional for Manual mode: Drive manually using the shift paddles.
- 5. Manual driving mode can only be activated from the D (Drive) position.
 - In this mode, you can shift gears manually using the paddles behind the steering wheel.
 - No gear change will occur if the engine speed is not suitable (a warning will appear).
 - In M mode, the gearbox does not shift up automatically at high engine speed.
 - · Press M again to return to D mode.



After your journey

Turning off the ignition/engine

Keep your right foot on the brake pedal during these steps.

- Press the 'P' button, located above the R/N/D positions.
- Engage the electronic parking brake by pulling the 'P' switch upwards (the red light will turn on).
- Turn the key back and remove it from the ignition.



Air conditioning/Heating



Activate the air conditioning by pressing the "A/C" button. Use the left dial to set the temperature and the right dial to adjust the fan speed. Defog the front and rear windows using the dedicated buttons.





Wipers

HI: Fast wiping

LO: Normal wiping **AUTO:** Automatic

wiping.

OFF: Switching off

1x: Single wipe



Push the lever away from you to spray and wipe the windshield. Turn the ring at the end of the lever to activate the rear wiper.

Adjust side mirrors



Control on the driver's door handle:

- Select the mirror using switch A and adjust it to the desired position using knob B.
- Return the switch to the neutral position after adjustment.

Navigation (via smartphone)

This vehicle does not have builtin GPS, but Android Auto and Apple CarPlay are available. Connect your smartphone using a USB cable to the USB-A port located at the bottom of the dashboard (next to the 12V socket), or connect via Bluetooth.

Headlights/Fog lights

Controls on the dashboard to the left of the steering wheel. With rotary switch (a) you can select: auto mode, parking lights, and low beam headlights.

Press this switch to activate the rear fog lights. (b) Left dial: adjust the headlight height.

(c) Right notched wheel: adjust the brightness of the display lighting.



Cruise control / Speed limit

Controls on the left side of the steering wheel

- 1. Select cruise control
 - + increase speed
 - decrease speed / activate cruise control

2. Select speed limiter

- + increase maximum speed
- decrease speed / activate speed limiter

The cruise control information is displayed on the instrument panel screen. See the vehicle's manual for more details.



Open the boot



The trunk handle is located underneath the emblem on the trunk lid.

Spare wheel



The spare wheel is stored under the boot floor, along with a jack and wheel wrench. See instruction manual for further instructions.

Fuel cap (always use gasoline EURO95/E10)



On the driver's side at the back. You can place the cap in the dedicated holder on the fuel lid while fuelling.

12 Volt socket

It is located at the bottom of the dashboard, on both the left and right sides.

Park assist



This vehicle features a park assist system in the rear. When in reverse gear, a buzzer will beep faster as you get closer to an obstacle. Visual cues will be displayed on the screen near the central console. Be sure to brake in time!

Smartphone Holder

- Press the release button located at the bottom rear of the holder to open it fully.
- 2. Place your phone in the holder.
- 3. Secure it by pressing the side grips together.

