



# Renault Clio

Vehicle instruction manual: in the glove compartment

Fuel: Gasoline E10 / EURO95

Tyre pressure: see sticker on the pillar of the driver's door

## Before starting your journey

### Before starting, have you checked the following things?

- Have you answered the question about any damage in the cambio app?
- Have you answered the question about interior and exterior cleanliness in the cambio app?

## Starting the vehicle

### Ignition key

- The key is embedded in the remote. Press the button to unfold the ignition key.
- To unlock the steering wheel, turn the ignition key while turning the steering wheel.

Keep your right foot on the brake and turn the key all the way to start the engine.

### Handbreak

Release the handbrake by pulling the lever up slightly while pressing the button at the end. Then lower the lever completely (the red warning light goes out).



## Start-Stop Function

When this feature is activated, the engine automatically turns off when you stop and restarts when you press the clutch pedal. To enable or disable again this function, press the (1) button located on the right side of the steering wheel, above the buttons of the aircsystem regulator.



## Reverse gear:

Pull the ring under the top part of the gear shift up and move the gear shift first to the left and then forwards.




## Rear doors

The rear door handles are integrated into the black window frame, at the top of the door.




## Adjust side mirrors

Controls on the driver's door handle:  
Select the right or left side mirror.  
Adjust the mirror using the round knob.

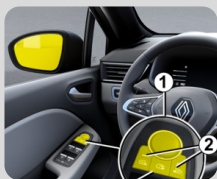


## Trunk

1. The release button is located above the license plate, just below the decorative slot in the center.
2. Pull the lid to open the boot.

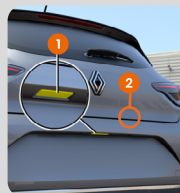

## Ventilation and air conditioning controls:

1. Turn the knob: air circulation selection.
2. Press in the middle: rear window demisting and defrosting.
3. Turn the knob: fan speed adjustment.
4. Press in the middle: air recirculation.
5. Turn the knob: air temperature adjustment
6. Press in the middle: air conditioning.

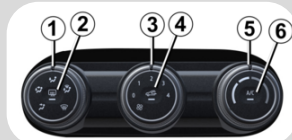

## Cruise control / Speed limit

Controls on the left side of the steering wheel

### (1) **Select speed limiter**

- + increase maximum speed
- decrease speed / activate speed limiter

### (2) **Select cruise control**

- + increase speed
- decrease speed / activate cruise control

The function switches off when you press the brake pedal or button (5).





## Headlights/ Fog lights

### Lights:

Turn the outer left selector to the desired position for the standard lights:

**Auto** = automatic

 = daytime running lights

 = dipped beam headlights

### Fog lights:


turn the second selector forward or backward to activate or deactivate the front or rear fog lights.



## Park assist

This vehicle features a **park assist system in the rear**. When in reverse gear, a buzzer will beep faster as you get closer to an obstacle. **Visual cues will be displayed** on the screen near the central console.

Be sure to **brake in time!**

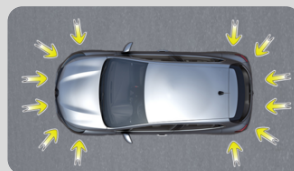

## Wipers

### Front:

**A = 1x wipe**

**B = 0 Off**

**C = Auto (with rain sensor)**

**D = Intermittent (1).** You adjust the interval speed with the middle ring (2).

**E = 2 Fast wipe**

**Pull the lever toward you to spray and wipe.**

### Rear wipers:

Rotate the dial forward one click to operate the rear wipers (intermittent). Turn one step further to spray and wipe the rear window.



## ECO-mode

The ECO mode is a function that keeps your fuel consumption as low as possible. This eco-friendly choice affects certain driving functions (acceleration, gear shifting, cruise control, deceleration, etc.).



## Navigation (Touchscreen)

Activating the GPS:

Open the menu bar below the touchscreen and select the second symbol from the left. On the touchscreen, press Navigation. To enter an address, press the arrow.

## SOS button


Please **refrain from using the SOS button or the assistance button** on the dashboard. In case of an emergency, this function automatically notifies the emergency services. If it is not an emergency, it is better to contact the (cambio) call center yourself in case of a breakdown or accident.



## Fuel cap

(always use gasoline EURO95/E10)

At the rear right. To open the fuel flap, press the flap itself (1). While refueling, hang the fuel cap on the hook (2) inside the flap.

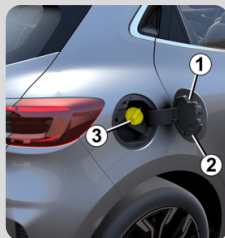

## 12 Volt socket and USB

This is located at the bottom of the dashboard, on both the left and right sides.



## Spare wheel

The spare wheel is stored **under the boot floor**, along with a **jack and wheel wrench**. See instruction manual for further instructions.

