



## Opel Astra break

Vehicle instruction manual: in the glove compartment

Fuel: Gasoline E10 / EURO95

Tyre pressure: see sticker on the pillar of the driver's door

### Before starting your journey

#### Before starting, have you checked the following things?

1. Have you answered the **question about any damage** in the cambio app?
2. Have you answered the **question about interior and exterior cleanliness** in the cambio app?

#### Adjusting the exterior mirrors

Control located on the driver's door handle.

1. Select the left or right mirror using the square selector.
2. Using the same selector, you can adjust the mirrors by pressing up or down.
3. To fold the mirrors inward, push and hold the selector downward.



## Starting the vehicle

### Start the engine

This car has a start/stop button (you cannot switch on the ignition with a key).

### Electronic parking brake

- **When starting off:** Before you start the engine, you must release the parking brake manually by pressing the (P) button on the centre console.
- **At the end of your trip:** pull the (P) button upwards. If the indicator light is on, the electronic parking brake is engaged.



### Start/stop Button

1. For the following operations, press both the clutch pedal and the brake pedal.
2. Then briefly press the start/stop button (to the right of the steering wheel).
3. If the car does not detect the key, hold it to the left of the steering column.

To turn off the engine, press the start/stop button once.



## On the road

### Reverse gear


Press the clutch pedal and, at the same time:

1. Lift the ring under the gear lever.
2. Engage the "R" gear (top left).



### Park assist

This vehicle features a park assist system in the rear. When in reverse gear, a buzzer will beep faster as you get closer to an obstacle. Visual cues will be displayed on the screen near the central console. Be sure to brake in time!

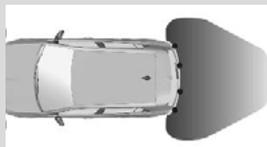

## Navigation

via Android Auto / Apple CarPlay

**The car does not have built-in GPS,** but it does have Mirror Screen via Android Auto / Apple CarPlay.

1. Press the home button (below the touchscreen).
2. Tap "Mirror Screen" on the display.
3. Turn on your phone's Bluetooth and select "search for devices."
4. Tap "connect to device" on the screen.
5. Follow the instructions on both screens to pair the devices.
6. Navigation starts automatically.

## Headlights/Fog lights

### Lights:

Turn the outer selector on the left to one of the following positions for the main lights:

**Auto** = automatic

 = daytime running lights

 = low beam headlights

### Rear fog lights:

Turn the second selector forward or backward to activate or deactivate the front or rear fog lights.



## Cruise control / Speed limit

### Controls on the left side of the steering wheel:

1.  Press the "**Assist**" button on the steering wheel to activate the cruise control.

- Press "OK" to activate.
- Press +- increase speed/decrease speed

2.  Press the "**Limit**" button to activate the speed limiter.

- Press "OK" to activate.
- press +- increase maximum speed/decrease speed

### Resume stored speed

Press  or OK to reactivate the adaptive cruise control at the stored speed.



## Air conditioning / heating

1. Higher / lower temperature
2. Air conditioning on / off
3. Automatic climate control
4. Maximum cooling
5. defogging the front windshield
6. Rear window defogging
7. Choice of air circulation: outside air or recirculation
8. Stronger / weaker airflow



### Fuel cap (always use gasoline EURO95/E10)

On the passenger side at the back. You can place the cap in the dedicated holder on the fuel lid while fuelling.



### Wipers

**2:** fast

**1:** slow

**AUTO:** automatic

**0:** Off


**1x:** single wipe



Pull the lever towards you to spray washer fluid while wiping. Turn the ring at the end down one position to activate the rear wiper; turn further to spray.

### Open the boot

The trunk handle is located underneath-right the emblem on the trunk lid.

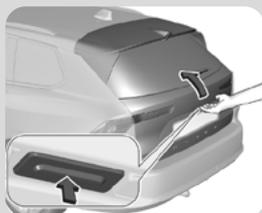

### Spare wheel

The spare wheel is stored under the boot floor, along with a jack and wheel wrench. See instruction manual for further instructions.

