



Renault
Car manual

Renault Clio VI Autom.

Car Manual: Located in the glove box.

Fuel: Petrol / EURO 95 (Unleaded).

Tyre Pressure: Refer to the information plate on the driver's side door pillar.

Before starting your journey

Have you checked the following?

- ✓ Have you answered the question about potential damage in the cambioApp?
- ✓ Have you answered the question about the interior and exterior cleanliness in the cambioApp?

Starting the engine

Contact key

The car does not use a traditional key to start, but a start/stop button. The key card is used for locking and unlocking the vehicle.

How to start the engine

The start-stop button (1) is located to the left of the central air vents.

1. Press and hold the brake pedal.
2. Press button (1) while holding the brake.
3. Release both the button and the brake pedal as soon as the engine has started.



Keycard

The keycard can be used for the following:

- Locking and unlocking the car (during the reservation).
- Opening the boot remotely.
- Activating the lights remotely.



Electronic handbrake

- Release the handbrake by pressing the **P** button .
- The red **P** light should now be extinguished.
- To apply the handbrake, pull the **P** lever upwards.



On the road

Automatic Transmission

This vehicle is equipped with an automatic transmission.

The selector lever is located on the right behind the steering wheel (see illustration) and has 5 positions. Select a position by moving the selector lever up or down to the desired position:

R: Reverse

N: Neutral

D: Drive

B: Forward gear with increased regenerative braking (depending on the car)

P: Park button (2)

The selected gear appears on the instrument cluster.



Adjusting the outer mirrors

Controls are located on the driver's door handle:

- Select the right or left door mirror (2).
- Use the round button to adjust the mirror.
- You can disable the automatic folding/unfolding of the mirrors (when the car is locked) (3).



Boot

The boot release button (1) is located at the bottom of the handle groove on the boot lid, between the Renault logo and the number plate.



Rear Doors

The door handles (1) are integrated into the black window surrounds.



Air conditioning/heating

Heating & Air Conditioning control the system using the buttons on the center console. Use the up or down buttons to:

1. Temperature: Increase or decrease.
2. Ventilation: Increase or decrease the airflow.
3. Windshield: Turn maximum demisting on or off.
4. Rear window: Turn demisting on or off.
5. Auto: Choose between Fast, Auto or Soft modes.
6. Air recirculation: Turn internal air recirculation on or off.
7. Max AC: Turn maximum cooling on or off.
8. Airflow: Select the air distribution in the cabin.
9. Off: Completely turn off the heating and air conditioning.



Cruise control and speed limiter

1. Select the desired driving aid using the "Mode" button (on the left of the steering wheel). The screen behind the steering wheel displays which function has been selected.
2. Adjust the desired speed with the SET/+, SET/- lever.
3. The "0" button is used to pause the system, while remembering the last selected speed.
4. The "RES" button is used to recall the last selected speed.



Lights/Fog lights



Dipped headlights

Turn the ring (4) until the mark is aligned with the low beam symbol.



Fog lights

To activate the rear fog light, turn the ring (4) until the AUTO symbol is aligned with the mark (3) and then turn the rotary switch to align (6) with the symbol (2).



High beams

Push the lever away from you to turn them on. Push it back towards you to turn them off. Press the end of the lever (5) to turn the automatic high beam function on/off.



Windscreen wipers



Front

- A = single wipe
- B = off
- C = automatic wipe (with sensor)
- D = intermittent wipe. You can adjust the speed of the intervals using the middle ring (2)
- E = quick wipe

Pull the lever towards you to spray and wipe.




Rear

- Turn the dial one notch forward for the rear windscreen wipers (interval).
- Turn it one more notch to activate the rear windscreen washer and wipers.

Parking Assist

This vehicle is equipped with a reversing camera.

The image from the reversing camera appears on the multimedia screen when the gear lever is shifted into reverse (R).

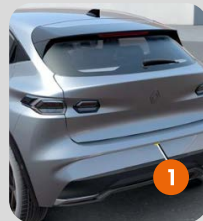

USB / 12V

"The vehicle is equipped with two USB-C ports located beneath the ventilation control panel (2). The 12V power outlet is positioned between the driver and passenger seats, making it easily accessible from the rear seats as well.



Navigation

Depending on the vehicle model, features include either an integrated GPS navigation system or a screen mirroring interface compatible with Apple CarPlay and Android Auto.

Eco Mode

ECO mode is a feature that optimises the car's range, but affects speed, acceleration, heating, etc.

You can (de)activate ECO mode using the ECO button located to the left of the steering wheel.



Fuel Filler Cap

(Always refuel with PETROL EURO95/E10)

Located at the rear right. To open the fuel filler flap, push directly on the flap itself (1).

While refuelling, you can hang the fuel cap on the hook provided on the inside of the flap if desired.




SOS Button

Please do not use the **SOS button** located above the central rear-view mirror. Emergency services are automatically notified in the event of an emergency where the airbags deploy.

Are you in an emergency but the airbags have not deployed? Press the **SOS button** for 3 seconds to alert the emergency services.

If it is **not** an emergency, please call the cambio call centre (available 24/7). You can contact the call centre via the cambioApp.

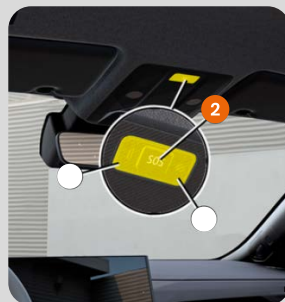

Spare Wheel

The spare wheel is located under the floor panel in the boot.

You will also find the wheel brace and the jack there. For further instructions, please refer to the car's owner's manual.

